



CONTROLS - EUPHONIA™ SYSTEM USER GUIDE

**IMPORTANT INFORMATION FOR THE INSTALLER
AND THE OWNER**

USING THE MIA™ SERIES CONTROLS
USING THE EUPHONIA™ SYSTEM

TABLE OF CONTENTS

THE MIA™ SERIES CONTROLS

INSTALLATION	4
USER GUIDE	5 - 19

EUPHONIA™ SYSTEM

INSTALLATION	20 - 22
USER GUIDE	23 - 25

MAINTENANCE	26 - 28
-------------	---------

TROUBLESHOOTING	29 - 30
-----------------	---------

WARRANTY	31 - 32
----------	---------

DRILLING TEMPLATES	33 - 35
--------------------	---------

956, chemin Olivier
Saint-Nicolas (Québec)
G7A 2N1

T 418.831.7701

1.800.463.2187

F 418.831.6623

1.800.382.8587

info@bainultra.com

MIA™ & MIAPLUS™ CONTROLS

INSTALLATION

REQUIRED TOOLS

- | | |
|---|-------------------|
| 1 | Fine teeth jigsaw |
| 2 | Drill |
| 3 | 1/4 in. drill bit |

LOCATION


Determine the most convenient location, on either the wall or the podium, to install the control module or consult the specifications sheet for the suggested location. To avoid drilling in an air intake zone or an electric component, always check under the deck before drilling.

DRILLING

Refer to the drilling template **on the last page** for the location and diameter of the holes.

INSTALLING THE TOUCHPAD

- | | |
|---|--|
| 1 | Push wiring through drilled holes. |
| 2 | Remove protective film from watertight seal. |
| 3 | Secure touchpad into place on either the podium or the wall by using 2, 8-32 x 1" studs and 2 wing nuts. |
| 4 | Tighten sufficiently to insure seal is airtight. |

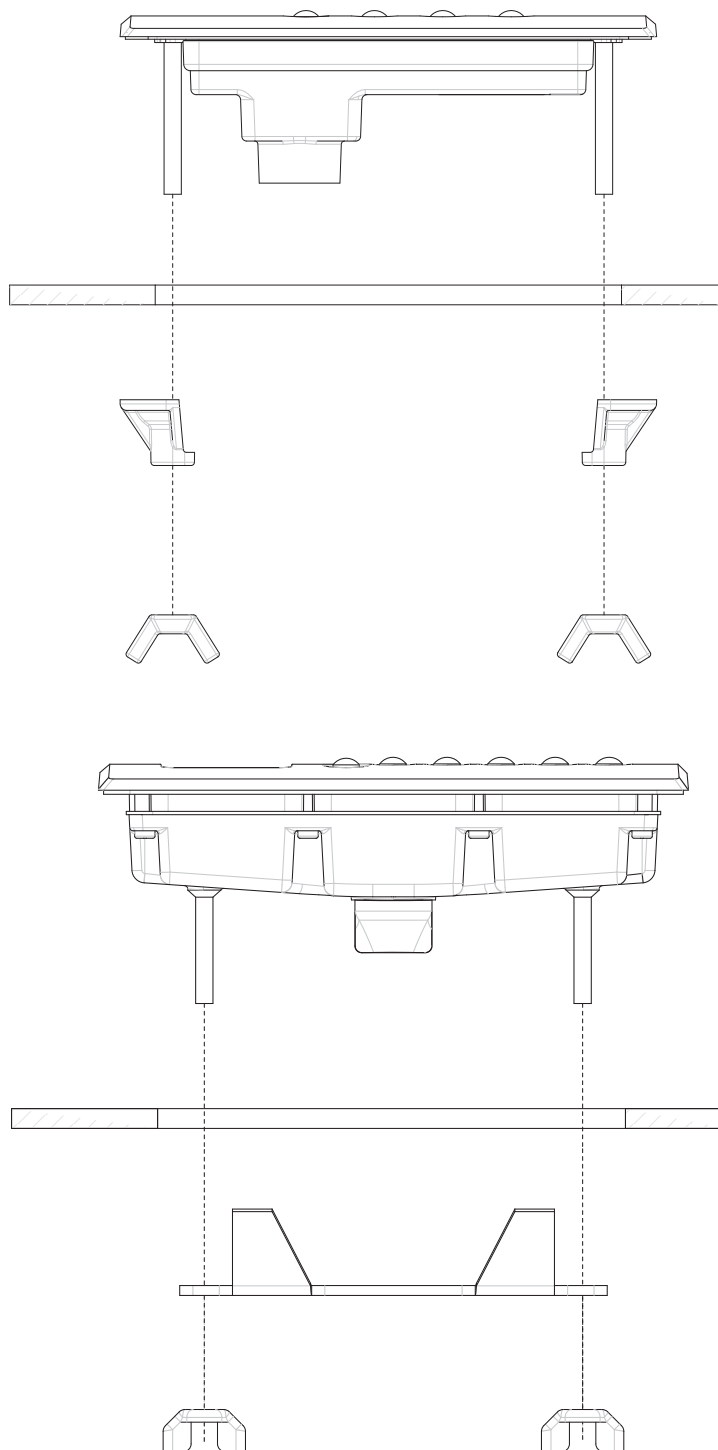

WARNING

- If control was not factory-installed, **it will be attached to the turbine.**




MIA™

USER GUIDE



ON/OFF

On

Press the (on/off) key  to start or to stop the turbine and the Mia control panel.

ADJUST AIR JET PRESSURE

Air jet pressure can be adjusted for maximum comfort and a remarkably effective massage. Default pressure is set to 60%.

Increase or decrease the pressure of the air jets by repeatedly pressing the  or  keys until the desired intensity is reached.

TO ACTIVATE THE DRYING CYCLE

This function completely drains the conduits and dries them for 90 seconds, regardless of whether or not the system was activated. By eliminating any water left in the conduits, the **Drying cycle** ensures perfect hygiene.

- No stagnant water
- No water left over from the previous bath

To activate the **Drying cycle**, press .

The operation will cease after 90 seconds. If you do not activate the function, the drying process will begin automatically after 15 minutes.

You can use the **Drying cycle** function immediately after a hydro-thermo massage session or whenever you wish.



The Mia control panel comes standard with the following baths:

- Azur
- BASA
- Thalassa

MAIN FUNCTIONS

- Increase or decrease air jet pressure
- Activate **Drying cycle** function

NOTE

- The heat for the heated backrest is controlled simultaneously with the intensity of the jet pressure.

MIAPLUS™

USER GUIDE

KEYS AND FUNCTIONS



Press this key to start or to stop the turbine and the MiaPlus control panel.



Press this key to return to function adjustment. The **Message** function appears on the screen by default.



Press either of these keys to navigate the main menu of the MiaPlus control panel.

Press the ► key to see the next function.

Functions are displayed in the following order:

- **Message** (air jet pressure)
- **Duration**
- **Chroma** (Chromatherapy option)
- **Sound** (Euphonia™ System option)
- **Backrest** (heated backrest)
- **Care**
- **Save**
- **Drying cycle**
- **Lock**
- **Contrast** (screen contrast)
- **Language**
- **Contact us**



Press either of these keys to navigate the options of each function.

Press the ▲ key to go up.

Press the ▼ key to go down.



Press this key to save the selected options and settings.



The Mia control panel comes standard with the following lines of baths:

- **Meridien**
- **Origami**
- **Thermal**
- **Amma**
- **TMU**
- **Elegancia**

MAIN FUNCTIONS

MiaPlus lets you personalize your hydro-thermo massage with the following functions and options:

- Adjust air jet pressure
- Select duration of session
- Select light color (Chromatherapy option)
- Activate Euphonia™ system (Sound Therapy option)
- Adjust backrest temperature
- Personalize session settings for up to 4 different users
- Personalize drying cycle for water jet conduits
- Lock controls when bath is not in use
- Adjust screen contrast
- Select display language

Settings are automatically saved until they are modified.



MASSAGE

This function lets each user regulate air jet pressure for personalized comfort and a remarkably effective hydro-thermo massage. The default pressure is the same as for the last bath.

Increase or decrease the pressure of the air jets by repeatedly pressing the ▲ or ▼ key until the desired pressure is reached. Pressure increases in 10% increments.

Pressing **OK** is optional.

DURATION

This function lets you program the duration of your bath from 5 to 30 minutes. The selected duration will remain in the memory until it is modified.

To select the **Duration**, press the ► key on the menu until the **Duration** function is displayed.

Select the desired duration using the ▲ or ▼ keys.

Pressing **OK** is optional.

Use the arrows ◀ or ▶ or the 🏠 key to return to the basic **Massage** screen.

CHROMA (OPTION)

This function uses color to provide increased comfort to body and soul.

To use the **Chroma** function, press the ► key on the menu until the **Chroma** function appears on the screen.

- To turn off the **Chroma** function, select **Off**.



THE CHROMA FUNCTION FEATURES EIGHT OPTIONS

▪ Off	Deactivates the chromatherapy function.
▪ Violet	Immunizing and relaxing. Boosts the immune system, detoxifies the body, and reduces stress.
▪ Blue	Soothing and relaxing. Reduces arterial pressure and hyperactivity and soothes the soul.
▪ Green	Provides calm and balance. Relaxes entire body and stabilizes emotions.
▪ Yellow	Digestion and creativity. Helps digestion and regularity and calms brain activity.
▪ Orange	Healing and pain relief. Boosts respiratory system and soothes aching muscles.
▪ Red	Stimulating and exciting. Activates circulation and wakes up the senses.
▪ Scan	Goes through each color in turn.

NOTE

- Should you not see the colors on the screen, pressing ▼ the first time will start the color scan. Pressing a second time will freeze the lights on their color, and the third time will turn the lights off.

CHROMA (NEXT)

Choosing a color

Choose the desired color using the ▲ and ▼ keys.

Press **OK** to validate your choice of color.

Selecting Scan

Select the **Scan** option using the ▲ or ▼ keys.

Press **OK** to validate your choice.

Use the arrows ◀ or ▶ or the 🏠 key to return to the basic **Massage** screen.



SOUND THERAPY – EUPHONIA™ SYSTEM (OPTION)

This function provides access to Sound Therapy and lets you control the Euphonia system.

Select the **Sound** function by pressing the ◀ or ▶ keys until the **Sound** function is displayed.

Ten options are available:

- **Stop**
- **Play/Pause**
- **Next**
- **Previous**
- **Volume**
- **Playlist**
- **Mode**
- **Source**
- **Equalizer**
- **Speakers**

Use the ▲ or ▼ keys to select an option.

Stop

Select **Stop** to turn off the Euphonia system.
Press **OK**.



SOUND (NEXT)

Press the ▲ key for the next function (**Play**) or the ▼ key for the last function (**Speakers**).

Play

To hear music, select **Play/Pause**. Press **OK**. Musical selection and the last song played during the previous session.

By pressing on **OK** a second time the music will be on Pause.

Next/Previous

Enables song change within a selected playlist.

Volume

Select **Volume** in the **Sound** menu and use the ▲ or ▼ keys to adjust the volume on your MP3 player. Press **OK**.

Press the ◀ key to return to the **Sound** function.

NOTE: You can also adjust the volume using the headset by pressing the + key (to increase) and the – key (to decrease).



SOUND (NEXT)

Playlist

This menu lets you select preprogrammed music files from your MP3 player.

Use the ▲ or ▼ arrow to select **Playlist** in the **Sound** menu. Press **OK**.

Available options in the Source menu:

- **Preselected music from BainUltra**
- Your personal selection as identified on your SD card

Select **All** using the ▲ or ▼ arrows to hear the file content in the programmed order. Press **OK**.

Select the **desired file** using the ▲ or ▼ arrows to hear the musical content of the selected preprogrammed file. Press **OK**.

Press ◀ to return to the **Sound** menu.

Mode

This menu lets you listen to music in three modes:

- **Shuffle**
- **Repeat**
- **Continuous**

Select **Continuous** to hear every song in the file in order. Press **OK**.

Select **Shuffle** to hear the songs in the selected file in shuffle (no random) order. Press **OK**.

Select **Repeat** to listen to the same song continuously. Press **OK**.

Press the ◀ key to return to the **Sound** menu or the ▶ key to go to the **File** menu.



SOUND (NEXT)
Source

This menu lets you select a **Source**. The basic audio source is BainUltra's (BU List) playlist. An SD card can be used to listen to your personal selections. However, your Euphonia™ system can be connected to an external source multipiece sound system or some other source.

Use the ▲ or ▼ arrow to select **Source** in the **Sound** menu. Press **OK**.

Available options:

- **Pers list**
- **BU list**
- **External**

Select **Pers list**, **BU list** or **External** by using the ▲ or ▼ arrow. Press **OK**.

Press ◀ to return to the **Sound** menu.

Speaker

This menu lets you activate or deactivate your audio player's speakers.

Use the ▲ or ▼ arrow to select **Speaker** in the **Sound** menu. Press **OK**.

Two options are available:

- **Activate**
- **Deactivate**

Select **Activate** to hear music from your audio player through the speakers. Press **OK**.

Select **Off** to hear music from your audio player through your headset. Press **OK**.

Press ◀ to return to the **Sound** menu.

Equalizer

This menu lets you adapt the sound to the type of music being played.

Various options are available. Use the ▲ or ▼ keys to select the type of sound you want. Press OK.

Press the ▶ key to reach the **Backrest** function or the ◀ key to reach the **Sound** function.



BACKREST

For maximum relaxation and exceptional comfort, one or two heated backrests can be installed in your bath and heated individually.

Select the **Backrest** function by pressing the ► key until the **Backrest** function is displayed.

Four options are available:

- **Off**
- **Low**
- **Medium**
- **High**

NOTE: Models with 2 backrests will specify backrest 1 and backrest 2.

Choose the desired option using the ▲ or ▼ keys.

Press **OK** to validate your choice.

Use the arrows ◀ or ▶ or the 🏠 key to return to the basic **Massage** screen.

NOTE: Selecting the **Off** option will turn off the backrests.



CARE

This function lets you vary air jet intensity for a deeper or gentler massage.

To select the **Care** function, press the ► key on the menu until the **Care** function appears.

Six options are available:

- **Massage** – Even intensity throughout the session
- **Wave** – Jet intensity cycles from 10% to maximum desired intensity
- **Bather 1, 2, 3, 4** – Stores each bather's selection

Use the ▼ or ▲ keys to select an option.

Press **OK** to validate your choice.

Use the arrows ◀ or ▶ or the 🏠 key to return to the basic **Massage** screen.



SAVE

The MiaPlus control system lets you save up to four personalized presets. This save function lets you conveniently preselect settings adapted to various users or purposes. Simply set the functions and options according to your tastes and save them under Bather 1, Bather 2, etc. These personalized settings will stay saved until modified.

Select a bather and save personalized settings

Press the ► key on the menu until the **Save** function appears.

Use the ▲ or ▼ keys to select a user number.

Press **OK**.

Use the arrows ◀ or ▶ or the 🏠 key to return to the basic **Massage** screen.

Repeat these steps for each user.



DRYING CYCLE

This function completely drains the conduits and dries them for 90 seconds. By eliminating any water left in the conduits, the **Drying cycle** ensures perfect hygiene.

- No stagnant water
- No water left over from the previous bath

Drying is mandatory after a hydro-thermo massage session.

Two options are available:

- **Daily**
- **After Bath**

Select After Bath

The **After Bath** option lets you program the **Drying cycle** to start up to 60 minutes after a bath.

This option is useful if you wish to dry the air jet conduits almost immediately after a bath.

To select the **After Bath** option, press the ► key on the menu until the **Drying cycle** function appears.

Use the ▲ and ▼ keys to select the **After Bath** option.

Press **OK**.

Dry Delay is displayed.

Press the ▲ key to select a value from 5 to 60 minutes.

Press **OK** to validate.

Use the arrows ◀ or ▶ or the ⏠ key to return to the basic **Massage** screen.

If no value is selected, the **Drying cycle** will start up automatically 15 minutes after the bath.



DRYING CYCLE (NEXT)
Select Daily

The **Daily** option lets you dry and clean the air jet system conduits at a specific time of day rather than within an hour of a hydro-thermo massage session.

To select the **Daily** option, press the ► key on the menu until the **Drying cycle** option appears.

Use the ▲ and ▼ keys to select the **Daily** option.

Press **OK**.

Start Time is displayed.

Use the ▲ or ▼ keys to select the time of day the **Drying cycle** function should start.

Press **OK**.

Current Time is displayed.

Press and hold the ▲ or ▼ keys or press them repeatedly to set the preprogrammed current time in 10 minute slots.

Press **OK**.

Once the **Daily** option is set, the **Drying cycle** will start every day at the same time until the setting is modified.

Use the arrows ◀ or ▶ or the 🏠 key to return to the basic **Massage** screen.

NOTE: The time format is preset as follows:

French: 24 hour


English: 12 hour (AM and PM)

Spanish: 24 hour





LOCK

This function lets you lock the control system in order to prevent the turbine from starting unexpectedly or accidentally.


It is also a child safety device, as it prevents children from starting the turbine by pressing the  key.

To **activate** the **Lock** function

Press the  key on the menu until the **Lock** function appears.

Use the  or  keys to select the **Activate** option.

Press **OK** to validate your choice.

When you stop the bath, the **Lock** function locks the  key, making it impossible to restart the turbine.


To restart the turbine when the Lock function is activated



Press the  key.

Lock is displayed. Press **OK**.

The turbine starts.

To **deactivate** the **Lock** function

Press the  key on the menu until the **Lock** function appears.

Use the  and  keys to select the **Off** option.

Press **OK**.

CONTRAST

This function controls the brightness of the MiaPlus display screen. No matter which setting you select, the screen is always clear and easy to read from any angle, regardless of the lighting conditions of the room where your bath is installed.



CONTRAST (NEXT)

NOTE: The screen automatically dims after 2 minutes.

To set display screen contrast, press the ▲ or ▼ key on the menu until the **Contrast** function appears.

NOTE: Use the ◀ key to access this function more quickly when you start the turbine.

Press ▲ or ▼ until the desired percentage (%) of contrast is displayed.

Press **OK** to validate your choice.

Use the arrows ◀ or ▶ or the 🏠 key to return to the basic **Massage** screen.

LANGUAGE

The MiaPlus control system lets you select one of the following three display languages:

- **French**
- **English**
- **Spanish**

NOTE: The factory-selected language is English.

To choose the display language, press the ▶ or ◀ key on the menu until the **Language** function appears.

NOTE: Use the ◀ key to access this function more quickly when you start the turbine.

Press ▲ or ▼ to select your desired language.

Press **OK**.

Use the arrows ◀ or ▶ or the 🏠 key to return to the basic **Massage** screen.



CONTACT US

Feel free to contact BainUltra for any information you may need about your Thermomasseur® bath and the MiaPlus™ control system.

Simply call the telephone number that appears on this screen for answers to any question.

1.800.463.2187

BainUltra wishes you complete relaxation!






MIAMULTI™

USER GUIDE

MIAMULTI


The MiaMulti control features the **same functions as the MiaPlus**, but also comes with a convenient and easy-to-use remote control. You enjoy all the benefits of a personalized hydro-thermo massage without having to leave the bath. Just lie back and relax!

REMOTE - HYDRO-THERMO MASSAGE FUNCTIONS (GREY KEYS)

1.	Key  Operates the remote
2.	BATH key Activates bath function selections
3.	Backrest 1 + key Increases the temperature of backrest 1
4.	Backrest 1 – key Decreases the temperature of backrest 1
5.	Backrest 2 + key Increases the temperature of backrest 2
6.	Backrest 2 – key Decreases the temperature of backrest 2
7.	Blower + key  Increases air jet pressure
8.	Blower – key  Decreases air jet pressure
9.	Duration key  Selects bath duration Press the key to increase bath duration. Each time you press the key, your bath time increases 5 minutes, to the nearest round number.
10.	Chroma key  Selects the chromatherapy function. To change the color, press the key until the desired color is displayed.

DUAL-FUNCTION REMOTE



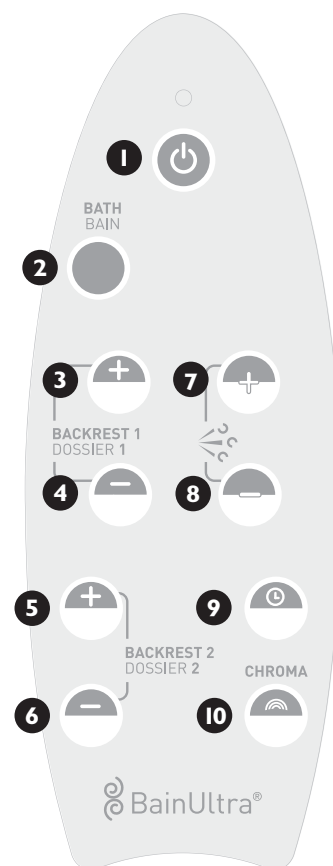





Use the remote to adjust bath and Euphonia™ system functions, if your bath is equipped with Sound Therapy. For a detailed description of functions, see the MiaPlus section of the manual.



Remote
HYDRO-THERMO MASSAGE functions
(Grey keys)


NOTE: To work efficiently, the remote must be pointed toward the MiaMulti wall-mounted control in the room where your bath is.

REMOTE - EUPHONIA™ SYSTEM FUNCTIONS
(BLUE KEYS)

1.	Sound key Activates Euphonia system selections
2.	Aux. key  Selects the Source
3.	Mute key  Selects "Mute" mode
4.	Play – Pause key  Selects "Play" or "Pause"
5.	Back key  Selects "Back" mode
6.	+ key  Raises the volume
7.	– key  Decreases the volume
8.	Stop key  Turns off the Euphonia system
9.	Forward key  Selects "Forward" mode

Remote
EUPHONIA™ SYSTEM functions
(Blue keys)

NOTE: To work efficiently, the remote must be pointed toward the MiaMulti wall-mounted control in the room where your bath is.

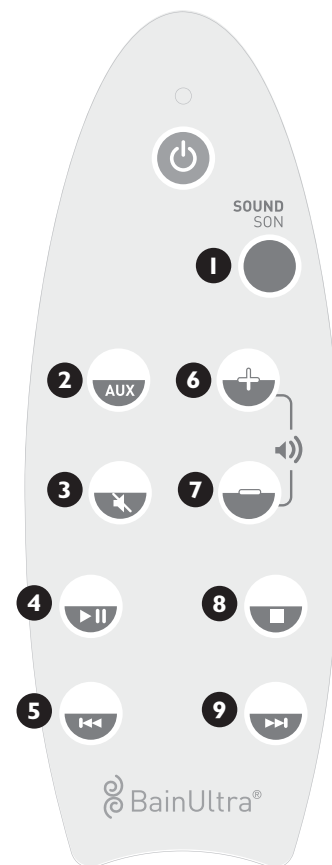

EUPHONIA™ SYSTEM

INSTALLATION

INSTALLING THE MP3 PLAYER

In the wall, cut out a rectangle 105 mm (4 1/8") long by 54 mm (2 1/8") high.

Drill two mounting holes at 132 mm (5 1/4") and insert the blue anchors for the no. 8 screws.

Run the wires and connect them to the MP3 player.



Detach the MP3 player faceplate and screw the two no. 8 screws into the blue anchors.

Check to make sure the MP3 player is working. If it is working properly, reattach the MP3 player faceplate using the clips (see drawing).

The infrared sensor must be installed at a maximum distance of 15'. The installation distance may vary according to lighting conditions; for example, the sun may reduce performances.

Locate sensor so that it is visible from bath.

A test is recommended to check the effectiveness of the sensor's position before proceeding to final installation.

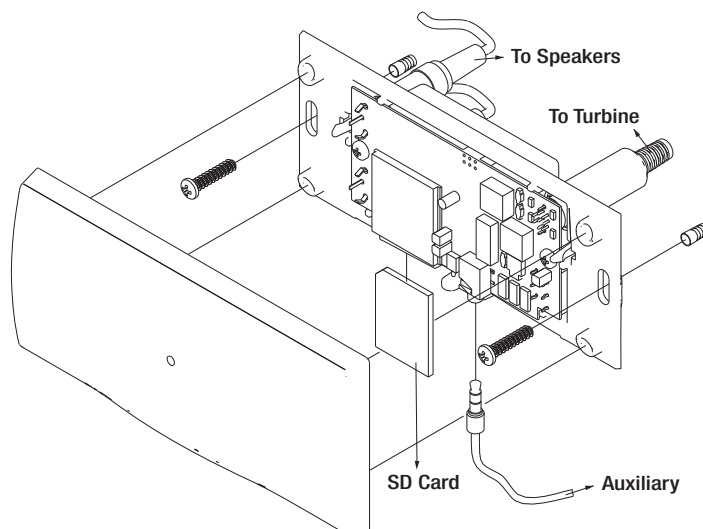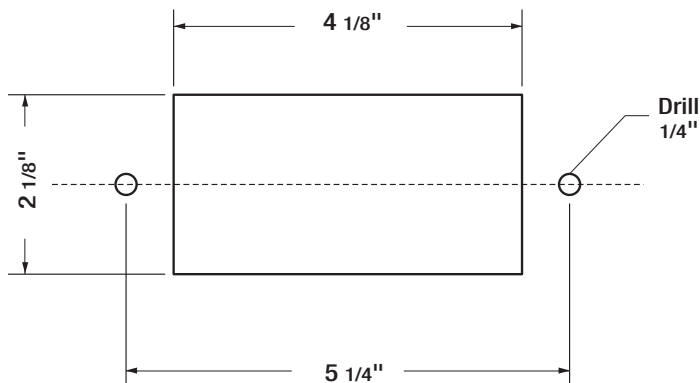


CONNECTING MP3 PLAYER TO THE TURBINE

Connect the mini-DIN connector of the cable to the back of the MP3 player and run it into the wall to connect it to the bath turbine. The cable provided is 4.5 meters (15') long.

Plug the connector into the socket labeled with the letters "CO" (purple). **(Turbine section - Electrical installation).**

CONNECTING CHROMATHERAPY MODULE

If the bathtub is equipped with a chromatherapy module, connect the other end of the cable to the chromatherapy box. The socket is labeled with the letters "CO" (purple). **(Turbine section - Electrical installation).**

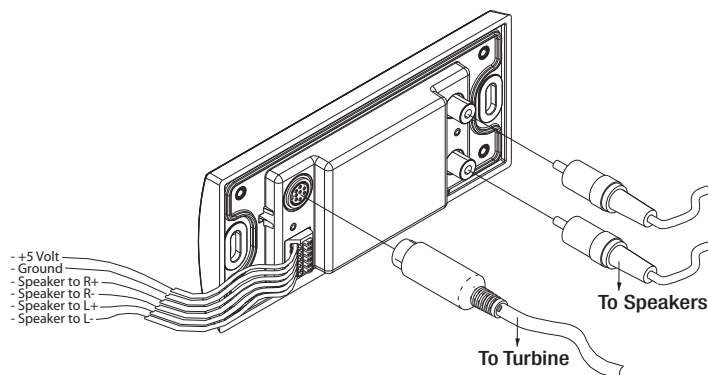

WARNING

- Risk of electrocution. The MP3 player must be installed at least 1.5 meters (5') from all water sources, such as bathtubs, showers, sinks, etc. Failure to comply with this instruction may create risk of electrocution and harm to your health. The MP3 player must be installed in an environment where the temperature is between 0°C and 45°C. The relative humidity in the room where it is installed must not be higher than 95%.
- Non-compliance of these terms will void the warranty.

CONNECTING ELECTRICAL POWER SUPPLY

The electrical power supply module must be plugged into a 120 volt/15 amp/60 hertz outlet.

After running the wire into the wall, plug the black wire with a white line into the first connector from the top and the black wire into second connector. **(See connection diagram at previous page).**

The power supply module may be connected a maximum of 6.09 meters (20') from the MP3 player.

Electrical hookup must be performed in compliance with the local electrical code. **(See connection diagram at previous page).**

To properly insert the stripped wires into their connectors, use the tip of a pencil to push on the connecting strip. It will then be easy to insert the wire. **(See connection diagram at previous page).**

CONNECTING A PERMANENT EXTERNAL SOURCE

To connect an external analog Source such as a central sound system, connect the wires to the back of the MP3 player **(see connection diagram at previous page).**

NOTE: The input signal must not exceed 10 watts.

CONNECTING A TEMPORARY AUXILIARY EXTERNAL SOURCE

You can also connect other external Sources such as CD players. To do so, you have to use a 3.5 mm (1/8") male-male jack (**see connection diagram at page 66**). This function allows you to listen to music that is not in your MP3 player.

If you are using an external source, set the volume to about 80% for optimal sound quality.

INSERTING THE SD MEMORY CARD

Insert the SD memory card in the slot located underneath the MP3 player (**see connection diagram at page 66**).

Technical specifications

- Bluetooth 2.0 A2DP wireless technology
- Range: 10 meters (33') (without physical interference)
- Water resistance: **The headset is intended for normal bath use. Do not leave under water.**

WARNING: Do not wear the headset while it is recharging. Place the headset and charger at least 1.5 meters (5') from the bathtub.

EUPHONIA™ SYSTEM

USER GUIDE

BEFORE THE FIRST USE

SYNCHRONIZING HEADSET WITH MP3 MODULE

Make sure that the headset is at least 1 meter (3.2') from the MP3 player.

Press simultaneously on “+” and “-” until you hear four beep audible signal in the headset.

Press the MP3 player button. The LED light should start flashing quickly.

After a few seconds, a two-beep audible signal (beep-beep) will sound.

FOR FOLLOWING USES

TURNING ON THE HEADSET

Hold down the “+” key for about 3 seconds until you hear a three-beep audible signal (beep-beep-beep).


After a few seconds, the headset will detect the MP3 player signal and you will hear two beeps. If music is playing, you will hear it.

If the bathtub is not turned on, the headset will not detect the MP3 player and it will automatically power off.

OPERATING THE MP3 PLAYER

The MP3 player is equipped with a light-emitting diode (LED) screen that indicates the MP3 status.

- LED flashing quickly: The MP3 player is trying to synch with a headset.
- LED flashing slowly: The MP3 player is synched with a headset.
- LED stays lit: The speakers are turned on and the headset is off.
- LED is off: The bathtub is off.

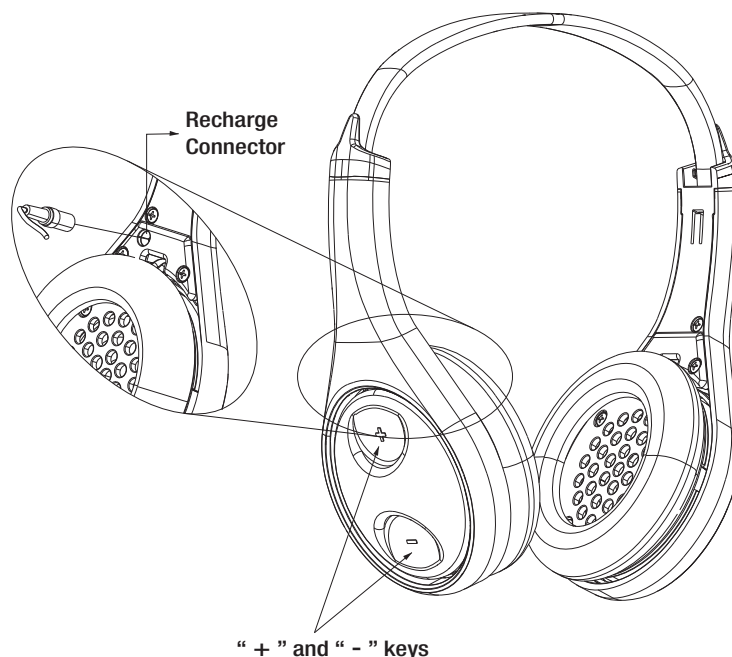

WARNING

- Do not use the headset at temperatures above 45°C.

ADJUSTING THE VOLUME

Press the “+” key to raise the headset volume or “-” to lower the volume.

AUTOMATIC HEADSET SHUTDOWN

The headset automatically shuts off when the MP3 player is turned off (i.e., when the bathtub is turned off).

MANUAL HEADSET SHUTDOWN

Hold down the “-” key to turn down the volume. Release and press again until you hear three beeps in the headset.

RECHARGING HEADSET

Use the provided charger to recharge the headset. Plug the charger into the connector located inside the headset.

A two-beep audible signal indicates that the headset is recharging.

At the end of the charging cycle, you will hear three beeps.

The headset will then shut off automatically.

USING AN SD CARD (NOT INCLUDED)

Your system is compatible with MP3 and WMA music formats.

To download relaxing music from a computer, use a portable SD memory card.

Insert the SD card into the appropriate reader on your computer. You may need an SD card adapter for certain computers.

ORGANIZING MUSIC

The music must be organized by folder on the card (e.g., by artist or type of music).

Only one folder level can be used.

The MP3 player will not recognize files if they are filed in more than one folder level.

OPTIONAL ACCESSORIES

To round out your Euphonia™ system, you can add an SD card to listen to your own musical selections in MP3 or WMA format.

You may need an SD card reader to connect the card to your computer. These accessories are available at electronic supply stores.

You will need a 3.5 mm (1/8") male-male jack to connect external audio peripherals.

MAINTENANCE

ACRYLIC

Technical information

- All BainUltra® ThermoMasseurs® are made of Lucite acrylic.

Maintenance

- Clean acrylic with a mild non-abrasive product.
- Abrasive products such as powder, paint thinners, turpentine and gas can damage the shine and lustre of the acrylic.
- For particularly tough stains, use a small amount of wood alcohol (methyl hydrate).

Safety instructions

- When applying wood alcohol (methyl hydrate), use gloves to protect hands. Rinse thoroughly after use.
- Ensure that essential oils or other therapeutic products added to bath water will not damage the acrylic finish.

The BainUltra® ThermoMasseur® is as simple to care for as a conventional acrylic bath. There are no pumps, valves, pipes, nor accessories to take apart or clean. Thanks to its design, the system is perfectly hygienic and completely dry. The automatic and programmable drying cycles completely empty the air channel. No standing water. Nothing left over from the previous bath. The user does not have to worry about the air channels nor the turbine. Simply clean the surface of the bath with a non-abrasive cleanser.

ACRYLIC (MINOR REPAIRS)

Maintenance

- For minor surface damage, use a polishing putty for acrylic surfaces or automobiles.

Safety instructions

- Follow polish manufacturers' instructions.

IMPORTANT

- Any product added to your ThermoMasseur® must be dissolved in the water or if not, be mixed with an emulsifier (see the Therapy Guide for more details) in order to ensure the longevity of your bath's acrylic as well as the efficiency of its system, along with the exceptional quality of care offered by your BainUltra bath.

ACRYLIC (DEEPER SCRATCHES)
Maintenance

- For slightly deeper scratches, sand the spot with a wet sandpaper before polishing.
- Depth of abrasion or scratch will determine grade of sandpaper required:
 - Slight to moderate damage — grade 600, 800, then 1200 sandpaper
 - Deeper damage — grade 400, 600, 800, then 1200 sandpaper
- When sanding, start with lowest grade sandpaper (e.g. 400), working your way up as you sand a slightly larger area with each new grade. Finish with polishing putty.

ACRYSTAL™ MyBodyRest™ COMPONENTS (FOR TEKURA™)
Maintenance

- The Acrystal™ MyBodyRest™ kit requires the same easy maintenance as our other acrylic (standard) parts (See page 54)
- Clean Acrystal™ components using a mild, non abrasive cleaning product, such as those used for glass and mirrors, and a soft cloth.

SYSTEM
Technical information

- An automatic drying cycle starts 10 minutes after each use ensuring the dryness of the channel.
- It is normal to hear the turbine working at a certain time of day. This means that the drying cycle has been programmed.

Maintenance

- **BainUltra® recommends to start the system once every 90 days.**
- BainUltra recommends to start the drying cycle everytime the bath is used as a shower or just to soak.

CABREUVA WOOD MyBodyRest™ COMPONENTS (FOR TEKURA™)
Maintenance

- The Cabreuva components have been originally treated with W15 oil for long lasting beauty. These components should be treated twice a year with Varathane® oil intended for wood, to retain its durability.
- Cabreuva components should be cleaned with a damp cloth or with a very mild soap, if required. Avoid any harsh cleaning products. Simply sponge off any film or residues that are left on the wood after use.
- If the wood is inadvertently scratched, a light sanding and application of Varathane will return it to its original state.
- Naturally occurring variances are part of the appeal of this organic matter, making any wood component unique.

CEDAR WOOD (TMU 5454/6060)
Technical information

- The cedar wood components (step and/or shelf) are protected by a highly durable and resilient coat of catalyzed polyurethane.
- This protective coating is designed for a high humidity environment and ensures a long-lasting, stain and water resistant finish.

CEDAR WOOD (TMU 5454/6060) NEXT
Maintenance

- To protect the wood finish, do not leave any soaps or detergents on wood surfaces for long periods of time.
- Clean the wood with mild soap and a cotton cloth. Do not use abrasive or corrosive products.

LYPTUS WOOD (AYOURA)
Technical information

- The Ayoura freestanding model has a lip made of Lyptus wood treated with polyurethane oil.
- Lyptus wood is known for its resistance to moisture and mildew.

Maintenance

- Use polyurethane oil or another natural oil (e.g., Watco, Varathane) available in a hardware store.
- Apply with a rag.
- Buff 3 to 4 times per year.

MASSAGE TABLE
Technical information

- The massage table is covered in Whisper™ vinyl. Its structure is wood and the supports are polyurethane.

Maintenance

- Clean table (vinyl, wood, and urethane) with a cloth, warm water, and some dish soap. Rinse with a clean, moist cloth.
- Clean polyurethane blocks that come into contact with the bath to prevent scratching bath with sand, dust, or other abrasive particles.
- A storage space of at least 45" x 40" x 16" (115 cm x 102 cm x 41 cm) is required for the table.


 





	Scratch
	Paper grade 220
	Paper grade 400
	Paper grade 600
	Paper grade 800
	Paper grade 1200
	Polish

Table - Sandpaper grade

TROUBLESHOOTING

Your BainUltra® ThermoMasseur® has been manufactured and inspected with the greatest care. In addition, it has been thoroughly tested on a test bench to offer you a product of superior quality satisfying your highest expectations. The following troubleshooting chart will assist you in correcting a problem. If you continue to have problems, contact your retailer or the manufacturer.

SITUATION	SOLUTIONS
Your bath will not start.	<ul style="list-style-type: none"> ▪ Make sure breaker is "ON." ▪ Shut off and restart breaker. ▪ Check junction box connections to bath (for Canada only).
Breaker trips continually.	<ul style="list-style-type: none"> ▪ Make sure that your bath is the only appliance connected to circuit. ▪ Check for a short circuit between bath and breaker box. ▪ Breaker may too sensitive, defective or old. Try a new breaker. This component must be new.
Turbine stops working after only a few minutes.	<p>Turbine and air-heater are equipped with heat sensors designed to cut off power in case of overheating. Insufficient air circulation may be the cause.</p> <ul style="list-style-type: none"> ▪ Make sure turbine has sufficient ventilation. ▪ Make sure turbine intake is not obstructed.
A few airjets do not work at lowest speeds.	<p>To meet everyone's needs, particularly those of children, your bath is designed to work at a very low speed. Air jets in half-seat or those closest to drain in TMU models, especially larger models, may remain inactive at lowest speeds. This is normal and can be easily remedied by slowly raising speed to "open" inactive air jets and then lowering it to desired level. Certain conditions may amplify this occurrence.</p> <ul style="list-style-type: none"> ▪ Check for turbine intake obstruction, too great a distance between turbine and bath, too many directional changes (elbows), and, if adequate piping has been used. See TURBINE RELOCATION paragraph.

SITUATION	SOLUTIONS
Air jets seem cool.	<p>Temperature of air injected into bath is directly proportional to the speed of the turbine. The higher the speed, the warmer the air is. A simple way to check if your air-heater or heaters are working properly is to turn on the system at the highest speed (if your control offers a range of intensities) with no water in the bath (there is absolutely no risk to the system). After 3 to 5 minutes, the heated backrest or backrests should be warm to the touch and jets should also seem warm when you bring your hands close to them.</p> <ul style="list-style-type: none"> ▪ Check the turbine air intake. It should not be too cold nor too warm. Ideally, the temperature should be between 72°F (20°C) and 86°F (30°C). ▪ Check that distance between turbine and bath is not too great. If possible, insulate air line along its entire length. See turbine installation section of this manual.
LED does not work.	<p>An LED has a 100 000-hour lifecycle.</p> <ul style="list-style-type: none"> ▪ Verify wiring and connections. <p>IMPORTANT: THESE INSTRUCTIONS ONLY APPLY IF THE LED CAN BE ACCESSED FROM BATH EXTERIOR.</p> <ul style="list-style-type: none"> ▪ Upon verification, if LED still does not work, disconnect and replace the LED by doing the following: <ul style="list-style-type: none"> - Remove the LED module by pulling on the white part of the plug. If the module is difficult to remove, use a pair of vice-grips. - Detach the wire from the bath. - Unplug the wire from the chromatherapy control module. - Plug the wire into the chromatherapy control module. - Plug the LED module back into its socket. <p>NOTE: IT IS NOT NECESSARY TO REATTACH THE WIRE TO THE BATH.</p>

THE BAINULTRA® LIMITED WARRANTY

LIMITED WARRANTY

This limited warranty is extended only to the original purchaser of the unit under warranty and is valid only when bought through and registered by an authorized BainUltra® retailer. BainUltra® products are designed for residential use only. BainUltra® products used for commercial or display applications will be limited to a two-(2) year warranty against defaults in materials and workmanship regardless of the various defective components of the products. BainUltra® products sold outside of North America will be limited to a parts-only warranty through the dealer of the sale. Our service department will help diagnose the problem and will provide parts only for repairs or replacements covered by the warranty. All parts will be shipped to the dealer in North America. BainUltra® will not be responsible for cost of shipping or servicing outside of North America.

Your BainUltra® ThermoMasseur® bath is covered by the best warranty in the industry. BainUltra Inc. guarantees the acrylic and motor turbine of your bath for a twenty-(20) year period from the original purchase date against defects in materials and workmanship. In the case of the electronic control of the ThermoMasseur® or the Temazkal® and the massage table for the Ayoura®, BainUltra Inc. guarantees against defects in materials and workmanship for a five-(5) year period from the original purchase date.

The Euphonia system™ offers a warranty on its wall-mounted MP3 player for a five-(5) year period, and, on its headset for a one-(1) year period, from the original purchase date.

For wooden parts of certain models, BainUltra Inc. guarantees that in their original manufacturing form, these parts are free of any manufacturing, dimensional or strongly apparent natural defects for a one-(1) year period from the original purchase date.

EXCLUSIONS

The above-stated limited warranty applies as long as damage is not caused by an accident, abuse, misuse, fire, insects, use of abrasive products, force majeure or an act of God. Transport, handling or installation damages are also excluded. Any part that must be changed during the warranty period will be covered by the original warranty or for a two-(2) year period following replacement, according to the first contingency.

Because of their organic nature, wood components will expand and contract with seasonal changes and normal heating variations. With time, normal exposure to sunlight will slightly alter the wood tint. These changes are not covered by the warranty. The vinyl surface and the sheet of Ayoura's optional massage table are not covered by this warranty.

Moreover, this warranty is void if your BainUltra® ThermoMasseur® bath or your Temazkal®, or any other BainUltra® product is installed by anyone but a licensed contractor.

This warranty is also void if your BainUltra® bath, your Temazkal®, or any other BainUltra® product or part thereof has been modified or if any repairs have been attempted by anyone other than BainUltra Inc., an authorized dealer or representative of BainUltra Inc. Any and all components that are not provided by BainUltra Inc., as well as any items attached or installed on your BainUltra® ThermoMasseur® or your Temazkal®, or on any other BainUltra® product after the date of manufacture are expressly excluded from this limited warranty.

The warranty is void if the unit is installed outdoors, or has not been installed in accordance with the manufacturer's instructions and/or in compliance with local codes and ordinances.

PROCEDURE

Any defect involving the manufacturer's liability shall be reported to BainUltra Inc. within ten (10) days of its occurrence. Units claimed to be defective shall be held until inspected by an authorized representative of BainUltra Inc., and upon their specific instructions, units found to be defective will be repaired or replaced at BainUltra Inc.'s choice. The liability of BainUltra Inc. with respect to the sale of this unit shall be limited to repair or replacement by a similar product as provided above and does not include any cost of removal, reinstallation, transport of defective product, loss of time, salary or any other expenses as well as any consequential damages of any kind. BainUltra Inc. and its representatives shall not be held liable for any injury, loss, cost or other damage, whether consequential or incidental, that arise from any defect covered under this limited warranty, even if BainUltra Inc. has been advised of the possibility of such damage. An adequate access way to mechanical and electrical parts of your BainUltra® ThermoMasseur® bath, your Temazkal®, or any other BainUltra® product must be anticipated and prepared before an authorized representative arrives on the premises to carry out a repair. The costs incurred to provide access to the motor turbine, the electronic module or the heating system will not be covered by this warranty.

LIMITATIONS

This limited warranty replaces all other warranties, expressed or implied, in face or at law, including implied warranties of merchantability and fitness for a particular purpose. The terms of this limited warranty cannot be modified or extended in any way whatsoever by any agent, dealer, distributor, service company or other party other than BainUltra Inc.

LEGAL RIGHTS

This limited warranty gives specific legal rights and is not applicable if it interferes with any law or regulation in any state, province or country.


MIA™

DRILLING TEMPLATES



IMPORTANT

Drawing is to scale.

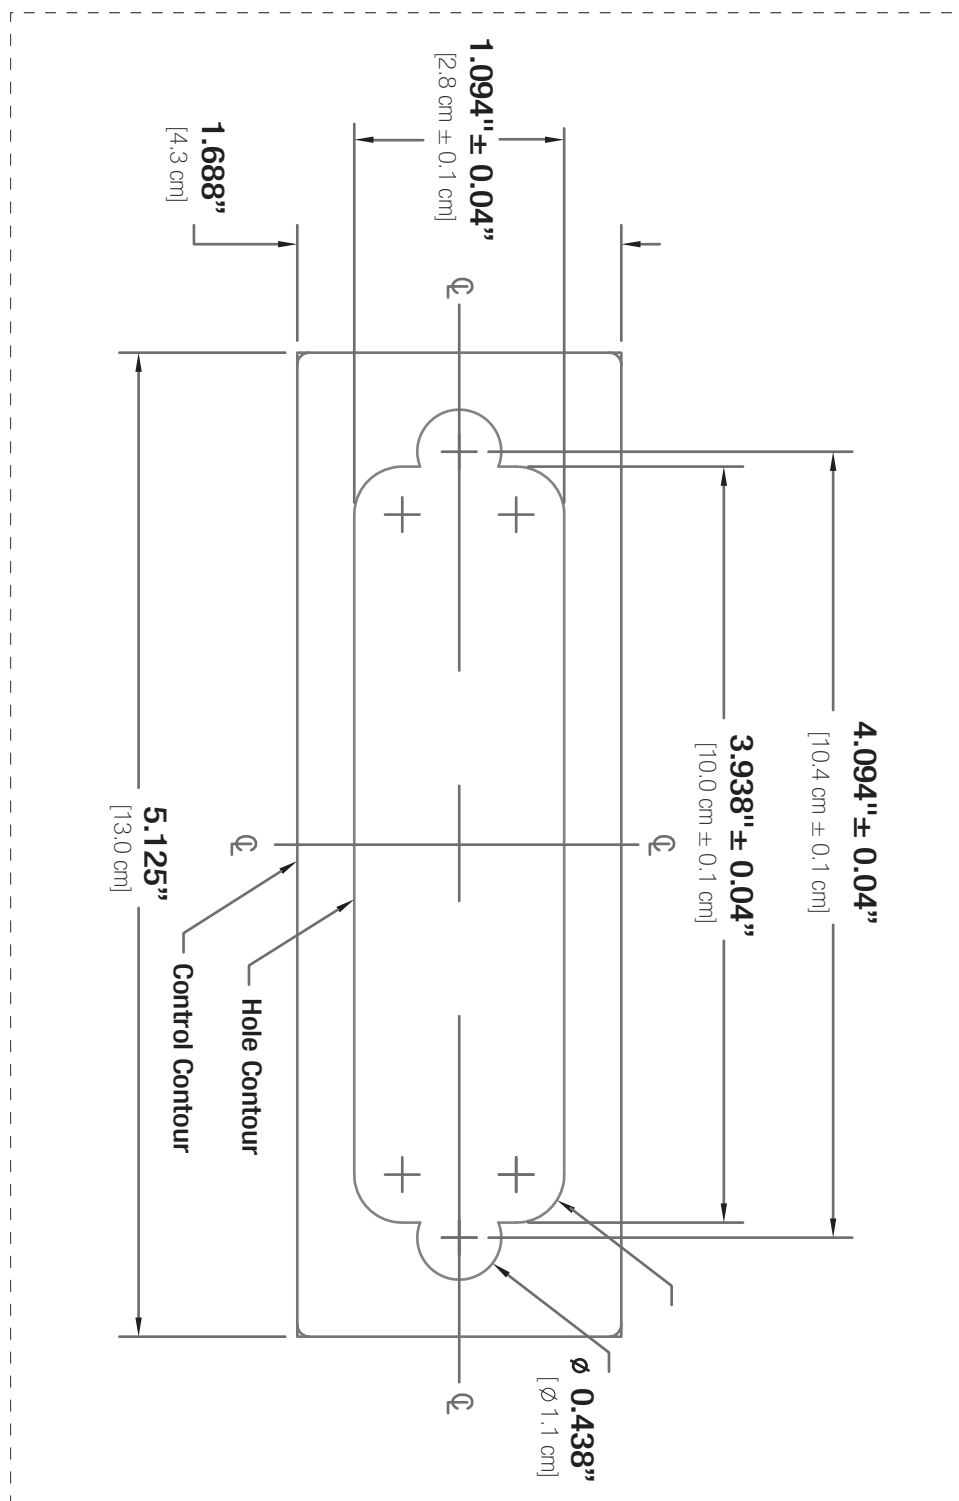

Drawing of Mia Control hole

MIAPLUS™ & MIAMULTI™

DRILLING TEMPLATES

IMPORTANT

Drawing is to scale.

Drawing of MiaPlus and MiaMulti control hole (same template).

Drawing of IR hole for MiaMulti

